

SL869-V2 and SL869L-V2 Family Product User Guide

1VV0301175 r1-2016-07-11



Product Applicability Table

PRODUCT
SL869-V2
SL869L-V2
SL869-V2S
SL869L-V2S

Table 1-1 Product Applicability



Usage and Disclosure Restrictions

License Agreements

The software described in this document is the property of Telit and its licensors. It is furnished by express license agreement only and may be used only in accordance with the terms of such an agreement.

Copyrighted Materials

Software and documentation are copyrighted materials. Making unauthorized copies is prohibited by law. No part of the software or documentation may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without prior written permission of Telit

High Risk Materials

Components, units, or third-party products used in the product described herein are NOT fault-tolerant and are NOT designed, manufactured, or intended for use as on-line control equipment in the following hazardous environments requiring fail-safe controls: the operation of Nuclear Facilities, Aircraft Navigation or Aircraft Communication Systems, Air Traffic Control, Life Support, or Weapons Systems (High Risk Activities"). Telit and its supplier(s) specifically disclaim any expressed or implied warranty of fitness for such High Risk Activities.

Trademarks

TELIT and the Stylized T Logo are registered in Trademark Office. All other product or service names are the property of their respective owners.

Copyright © Telit Communications S.p.A. 2016.



Contents

- 1. Introduction..... 12**
 - 1.1. Purpose..... 12
 - 1.2. Support and Contact Information 12
 - 1.3. Text Conventions 12
 - 1.4. Related Documents..... 13
- 2. Product Description 14**
 - 2.1. Product Overview 15
 - 2.2. Product Naming 16
 - 2.3. Product Variants..... 17
 - 2.3.1. SL869-V2S and SL869L-V2S Features..... 17
 - 2.3.2. SL869-V2 Family Product Features Table 18
 - 2.4. Block Diagrams 19
 - 2.4.1. SL869-V2 Block Diagram..... 19
 - 2.4.2. SL869L-V2 Block Diagram..... 20
 - 2.4.3. SL869-V2S Block Diagram 21
 - 2.4.4. SL869L-V2S Block Diagram 22
 - 2.5. SL869-V2 Module Photos 23
- 3. Evaluation Kit..... 25**
- 4. Product Features 27**
 - 4.1. Multi-Constellation Navigation 27
 - 4.2. Quasi-Zenith Satellite System (QZSS)..... 27
 - 4.3. Satellite-Based Augmentation System (SBAS) 27
 - 4.3.1. SBAS Corrections..... 27
 - 4.3.2. SBAS Ranging..... 27
 - 4.4. Assisted GPS (AGPS)..... 28
 - 4.4.1. Locally-generated AGPS - Embedded Assist System (EASY) 28
 - 4.4.2. Server-generated AGPS - Extended Prediction Orbit (EPO) 28
 - 4.4.3. Host EPO..... 28
 - 4.5. Differential GPS (DGPS) 29



4.6.	Elevation Mask Angle.....	29
4.7.	Static Navigation	29
4.8.	Jamming Rejection – Active Interference Cancellation (AIC).....	29
4.9.	Internal LNA.....	30
4.10.	10 Hz Navigation.....	30
4.11.	1PPS.....	30
4.12.	Serial I/O Port considerations	31
4.12.1.	UART	31
4.12.2.	I ² C	31
4.13.	Power Management Modes	32
4.13.1.	Full Power Continuous Mode	32
4.13.2.	Standby Mode	32
4.13.3.	Backup Mode	33
4.13.4.	Periodic Mode	33
4.13.5.	AlwaysLocate™ Mode.....	34
5.	Product Performance	35
5.1.	Performance - SL869-V2 and SL869L-V2.....	35
5.1.1.	Horizontal Position Accuracy - SL869-V2 and SL869L-V2	35
5.1.2.	Time to First Fix - SL869-V2 and SL869L-V2.....	36
5.1.3.	Sensitivity - SL869-V2 and SL869L-V2	37
5.1.4.	Jamming Mitigation Performance.....	38
5.2.	Performance - SL869-V2S and SL869L-V2S	40
5.2.1.	Horizontal Position Accuracy - SL869-V2S and SL869L-V2S	40
5.2.2.	Time to First Fix - SL869-V2S and SL869L-V2S	40
5.2.3.	Sensitivity - SL869-V2S and SL869L-V2S	41
6.	Software Interface	42
6.1.	NMEA Output Messages.....	42
6.1.1.	Standard Messages	42
6.1.2.	Proprietary Output Messages	43
6.2.	NMEA Input Commands	44
6.2.1.	NMEA Commands List.....	45
7.	Flash Upgradability (SL869-V2 and SL869L-V2 only).....	46
8.	Electrical Interface.....	47



8.1.	Pinout Diagrams and Tables	47
8.1.1.	SL869-V2 Pin-out diagram.....	47
8.1.2.	SL869-V2 Pin-out table.....	48
8.1.3.	SL869L-V2 Pin-out diagram.....	49
8.1.4.	SL869L-V2 Pin-out table.....	50
8.1.5.	SL869-V2S Pin-out diagram	51
8.1.6.	SL869-V2S Pin-out table	52
8.1.7.	SL869L-V2S Pin-out diagram	53
8.1.8.	SL869L-V2S Pin-out table.....	54
8.2.	Power Supply	55
8.2.1.	VCC.....	55
8.2.2.	VBATT	55
8.2.3.	VCC_RF	55
8.2.4.	DC Power Requirements	56
8.2.5.	DC Power Consumption: SL869-V2.....	56
8.2.6.	DC Power Consumption: SL869L-V2.....	57
8.2.7.	DC Power Consumption: SL869-V2S	58
8.2.8.	DC Power Consumption: SL869L-V2S.....	58
8.3.	Antenna RF Interface	59
8.3.1.	RF-IN.....	59
8.3.2.	Frequency Plan.....	60
8.3.3.	Burnout Protection	60
8.3.4.	Jamming Rejection – Active Interference Cancellation.....	60
8.4.	Digital Interface Signals	60
8.4.1.	Antenna Related.....	60
8.4.2.	Control Signals	62
8.4.3.	Output Signals	62
8.4.4.	I/O Ports	63
8.4.5.	Signal Levels	64
9.	Reference Designs	65
10.	RF Front End Design.....	67
10.1.	RF Signal Requirements.....	67
10.2.	GNSS Antenna Polarization.....	68
10.3.	Active versus Passive Antenna.....	68
10.4.	GNSS Antenna Gain.....	69



1. Introduction

1.1. Purpose

This document provides information about hardware and software features for the SL869-V2 family of GPS/GNSS receiver modules.

1.2. Support and Contact Information

For general contact, technical support, to report documentation errors and to order manuals, contact Telit Technical Support Center (TTSC) at:

TS-EMEA@telit.com

TS-AMERICAS@telit.com

TS-APAC@telit.com

Alternatively, use:

<http://www.telit.com/en/products/technical-support-center/contact.php>

For detailed information about where you can buy the Telit modules or for recommendations on accessories and components visit:

<http://www.telit.com>

To register for product news and announcements or for product questions contact Telit Technical Support Center (TTSC).

Our aim is to make this guide as helpful as possible. Keep us informed of your comments and suggestions for improvements.

Telit appreciates feedback from the users of our information.

1.3. Text Conventions



Danger – This information **MUST** be followed or catastrophic equipment failure or bodily injury may occur.



Caution or Warning – Alerts the user to important points about integrating the module, if these points are not followed, the module and end user equipment may fail or malfunction.



Tip or Information – Provides advice and suggestions that may be useful when integrating the module.

Dates are in ISO 8601 format, i.e. YYYY-MM-DD.



2.1. Product Overview

Complete GNSS receiver modules including memory, TCXO, and RTC

SL869-V2L and SL869L-V2S modules also include a built-in LNA and DC blocking cap

SL869-V2 and SL869L-V2: based on the MediaTek MT3333

SL869-V2S and SL869L-V2S: based on the MediaTek MT3337

Constellations

- SL869-V2: GPS (L1), QZSS, and either Glonass (L1) or BeiDou (B1) signals, Galileo ready
- SL869-V2S: Only GPS (L1) and QZSS

SL869-V2: SBAS capable (WAAS, EGNOS, MSAS, GAGAN) including ranging

SL869-V2S and SL869L-V2S: DGPS capable using the RTCM SC-104 protocol

AGPS support for extended ephemeris using local or server-based solutions: -

- Local: Embedded Assist System (EASY) ¹
- Server: Extended Prediction Orbit (EPO) ¹

Jamming Rejection - Active Interference Cancellation (AIC)

Supports active or passive antenna

1PPS output

Configurable fix reporting, Default: 1Hz, Max: 10 Hz

NMEA command input and data output

1 or 2 serial ports for input commands and output messages (see I/O Ports)

SL869L-V2: Second serial port is configured for I²C interface

Memory -

- SL869-V2: 8 Megabit built-in flash.
- SL869-V2S: ROM

Low power consumption

Power management modes for extended battery life

SL869-V2: 99 search channels and 33 simultaneous tracking channels

SL869-V2S: 66 search and 22 simultaneous tracking channels

Supported by evaluation kits

Industrial temperature range: -40°C to +85°C

Surface mountable by standard SMT equipment

24-pad 16.0 x 12.2 x 2.4 mm Industry Standard LLC castellated edge package


RoHS compliant design

Note 1: See **Table 2-1 SL869-V2 Product Features** for EASY/EPO support.



2.2. Product Naming

SL869-V2: Product Family name

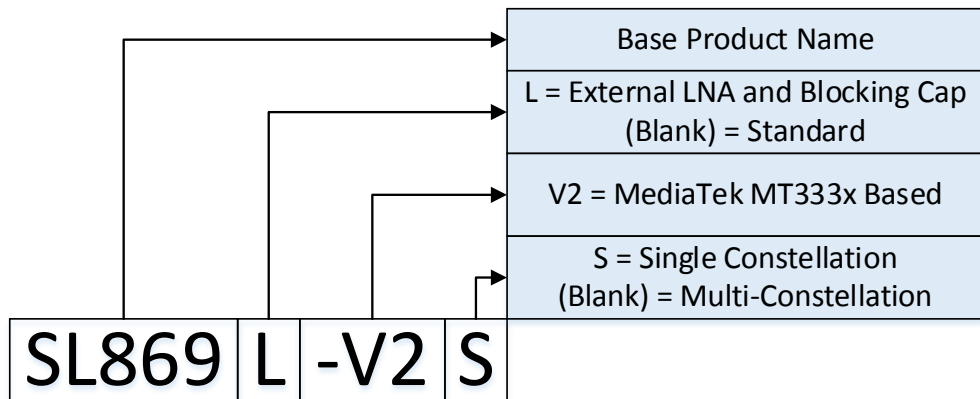

2.3.2. SL869-V2 Family Product Features Table

Feature	SL869-V2	SL869 <u>L</u> -V2	SL869-V2 <u>S</u>	SL869 <u>L</u> -V2 <u>S</u>
Constellations Supported	GPS QZSS Glonass BeiDou		GPS QZSS	
Memory	Flash		ROM	
Power Supply	Linear	Switching	Linear	Switching
Internal LNA	No	Yes	No	Yes
DC blocking cap	No	Yes	No	Yes
2 nd Port	No	Yes (I2C)	No	Yes (UART only)
Antenna Sense	No	Yes	No	
Antenna On	No	Yes	No	Yes
Software Upgradable	Yes		No	
EPO	Yes		Yes (host)	

Table 2-1 SL869-V2 Product Features

Feature	SL869-V2 <u>S</u> (early production)	SL869 <u>L</u> -V2 <u>S</u>
ROM version	3337	3337E (enhanced)
EASY	No	Yes
SBAS	Yes	No
AlwaysLocate	Yes	No
LOCUS	Yes	No

Table 2-2 ROM Features (-S modules only)



2.4. **Block Diagrams**
2.4.1. **SL869-V2 Block Diagram**

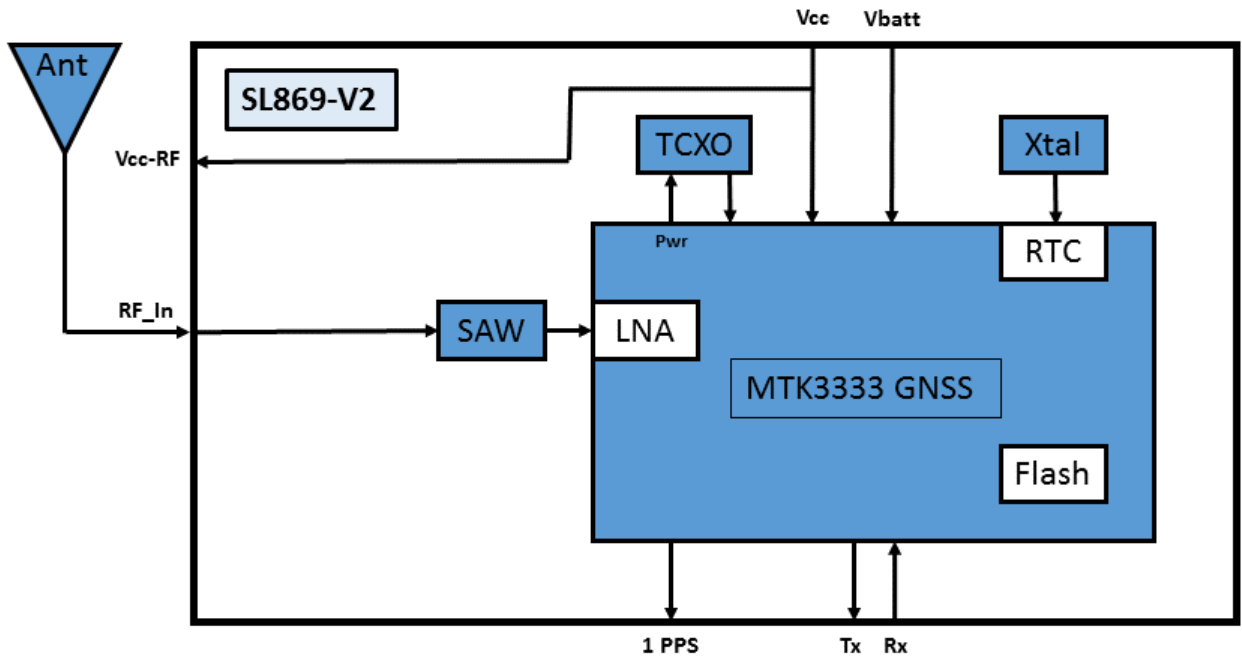


Figure 2-1 SL869-V2 Block diagram



2.4.2. SL869L-V2 Block Diagram

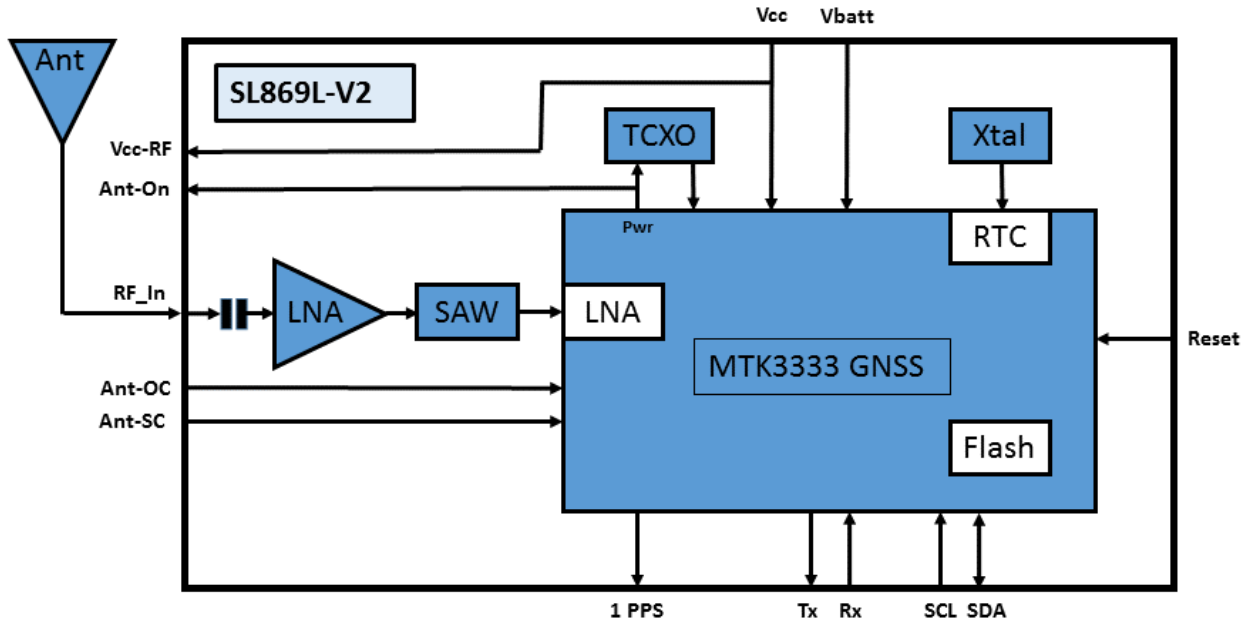


Figure 2-2 SL869L-V2 Block diagram



2.4.3. SL869-V2S Block Diagram

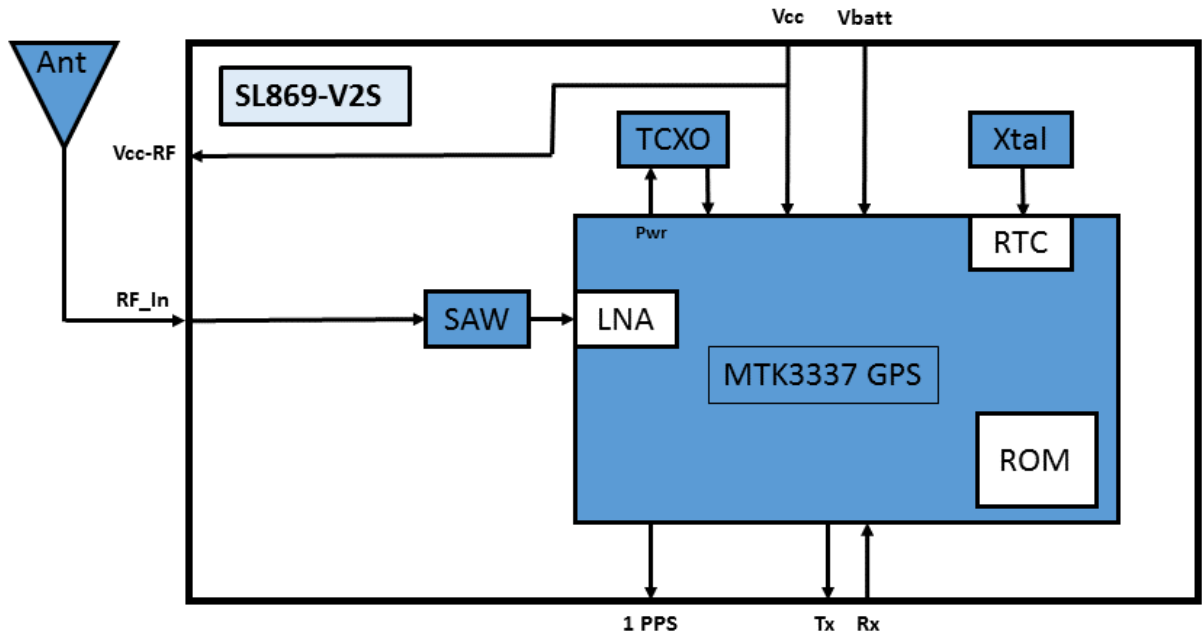


Figure 2-3 SL869-V2S - Block diagram



2.4.4. SL869L-V2S Block Diagram

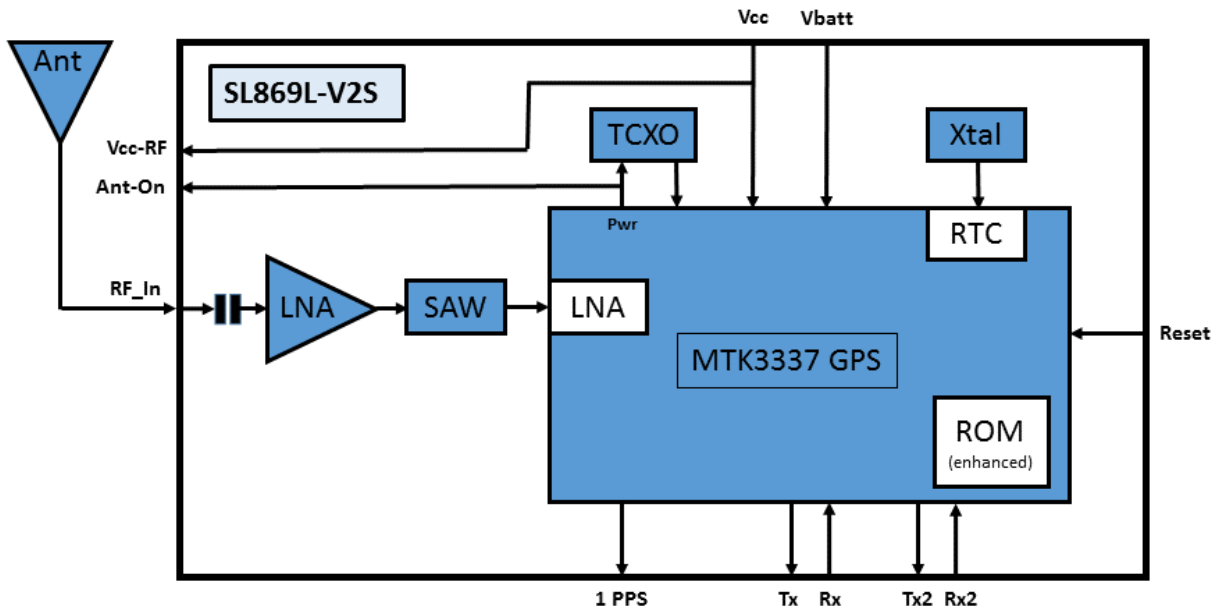


Figure 2-4 SL869L-V2S - Block diagram





Figure 2-7 SL869-V2S Photo

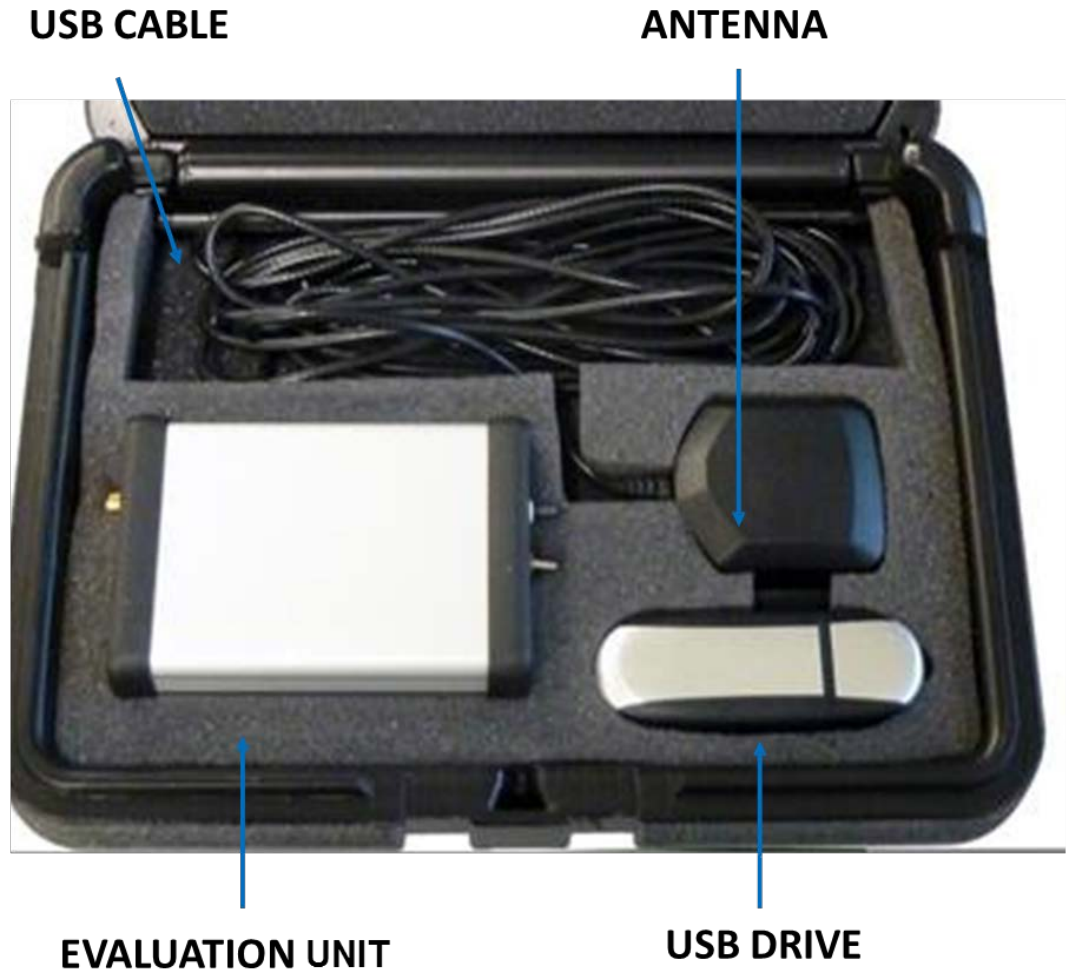


Figure 2-8 SL869L-V2S Module Photo



3. Evaluation Kit

The Evaluation Kit (EVK) contains the necessary hardware and software to assist the customer in evaluating the module for inclusion in a design.



Note: The SL869-V2 and SL869L-V2 kits include a GPS/GLONASS/BeiDou antenna.

Figure 3-1 SL869-V2 Family Evaluation Kit Contents



4. Product Features

4.1. Multi-Constellation Navigation

(SL869-V2 and SL869L-V2 only)

GPS and GLONASS constellations are enabled by default.

The user may enable or disable GPS, GLONASS, and/or BDS constellations via command. Using GLONASS or BDS alone may not give optimum positioning results depending on the region where the receiver is located. The SL869-V2S and SL869L-V2S support GPS only.

4.2. Quasi-Zenith Satellite System (QZSS)

The satellites of the Japanese SBAS are in a highly-inclined geosynchronous orbit, allowing continuous coverage over Japan using only three satellites. Their primary purpose is to provide augmentation to the GPS system, but the signals may also be used for ranging. NMEA reporting for QZSS may be enabled/disabled by the user.

4.3. Satellite-Based Augmentation System (SBAS)

The receiver is capable of using SBAS satellites as a source of both differential corrections and satellite ranging measurements. These systems (WAAS, EGNOS, GAGAN and MSAS) use geostationary satellites to transmit signals similar to that of GPS and in the same L1 band.

The SBAS feature limits the maximum fix rate to 5 Hz. If disabled, the maximum is 10 Hz.

The module is enabled for SBAS by default, but can be disabled by command **PTMK313**.

Either SBAS or DGPS corrections can be used and is set by the **PMTK301** command.

SBAS is not supported on the SL869L-V2S or the SL869-V2S with enhanced ROM (from Oct 2015).

4.3.1. SBAS Corrections

The SBAS satellites transmit a set of differential corrections to their respective regions. The use of SBAS corrections can improve positioning accuracy

4.3.2. SBAS Ranging

The use of SBAS satellites can augment the number of measurements available for the navigation solution, thus improving availability and accuracy.



4.4. Assisted GPS (AGPS)

Assisted GPS (or Aided GPS) is a method by which TTFF is improved (reduced) using information from a source other than broadcast GPS signals.

The necessary ephemeris data is calculated either by the receiver itself (locally-generated ephemeris) or a server (server-generated ephemeris) and stored in the module.

See § 2.3 **Product Variants** for applicability.

4.4.1. Locally-generated AGPS - Embedded Assist System (EASY)

Proprietary algorithms within the module perform GPS ephemeris prediction locally from stored broadcast ephemeris data (received from tracked satellites). The algorithms predict orbital parameters for up to three days. The module must operate in Full Power mode for at least 5 minutes to collect ephemeris data from visible satellites, or 12 hours for the full constellation.

EASY is on by default, but can be disabled by command **PMTK869**.

This feature is not supported on the SL869-V2S until ROM MT3337E (enhanced) version of Oct 2015. It is supported on the SL869L-V2S.

4.4.2. Server-generated AGPS - Extended Prediction Orbit (EPO) (SL869-V2 and SL869L-V2 only)

Server-based ephemeris predictions are maintained on Telit AGPS servers. The predicted ephemeris file is obtained from the AGPS server and is transmitted to the module over serial port 1 (RX). These predictions do not require local broadcast ephemeris collection, and are valid for up to 14 days.

The SL869-V2 supports server-based AGPS as a standard feature. Please refer to the Telit **EPO Application Note** for details. Example source code is available under NDA.

Contact TELIT for support regarding this service.

See the next section regarding EPO support (Host EPO) on the SL869-V2S and SL869L-V2S.

4.4.3. Host EPO (SL869-V2S and SL869L-V2S only)

The SL869-V2S and SL869L-V2S do not have flash memory. However, they can still make use of Assisted GPS. If the system design includes a host processor, it can access server-generated EPO data and send it to the SL869-V2S or SL869L-V2S over the primary serial port (which must be temporarily changed to binary mode). This data is valid for six hours.

Please refer to the MT333x Host EPO Application Note.

Contact Telit support for further details.



4.9. Internal LNA

(SL869L-V2 and SL869L-V2S only)

The SL869L-V2 and SL869L-V2S modules include a built-in LNA to improve sensitivity.

4.10. 10 Hz Navigation

The default rate of 1 Hz can be changed by command **PMTK500** to a maximum of 10 Hz. Enabling the SBAS feature limits the maximum fix rate to 5 Hz.

4.11. 1PPS

The module provides a 1PPS output signal.

Please see § 8.4.3.1 1PPS for detailed information.



4.13. Power Management Modes

The receiver supports operating modes that provide less frequent position fixes at reduced overall current consumption. Availability of GNSS signals in the operating environment will be a factor in choosing power management modes. The designer can choose a mode that provides the best trade-off of navigation performance versus power consumption.

The various power management modes can be enabled by sending the desired command using the host serial port (RX).

4.13.1. Full Power Continuous Mode

The module starts in full power continuous mode when powered up. This mode uses the acquisition engine to search for all possible satellites at full performance, resulting in the highest sensitivity and the shortest possible TTFF.

The receiver switches to the tracking engine to lower the power consumption when:

- A valid GPS/GNSS position is obtained
- The ephemeris for each satellite in view is valid

The user can return to Full Power mode from a low power mode by sending the following NMEA command:

```
$PMTK225,0*2B
```

just after the module wakes up from its previous sleep cycle.

If power is removed from both Vcc and Vbatt, then Time, Ephemeris, Almanac, EASY, EPO data, and PMTK configuration data will be lost. If Vbatt is present, no data will be lost.

4.13.2. Standby Mode

In this mode the receiver stops navigation, the internal processor enters the standby state, and the current drain at main supply VCC_IN is substantially reduced.

Standby mode is entered by sending the following NMEA command:

```
$PMTK161,0*28 (STOP Mode)
```

```
$PMTK161,1*28 (SLEEP Mode)
```

The host can then wake up the module from Standby mode to Full Power mode by sending any byte to the host port (RX).



4.13.5. AlwaysLocate™ Mode

(not available on the SL869L-V2S and the SL869-V2S with enhanced ROM)

AlwaysLocate™ is an intelligent controller of the Periodic mode where the main supply pin VCC_IN is still powered, but power distribution is controlled internally. Depending on the environment and motion conditions, the module can autonomously and adaptively adjust the parameters of the Periodic mode, e.g. RF on/off ratio and fix rate, to achieve a balance in positioning accuracy and power consumption. The average current drain will vary based on conditions.

AlwaysLocate™ mode is entered by sending the following NMEA command:

\$PMTK225,<mode>*<checksum><CR><LF>

Where mode = 8 for AlwaysLocate (standby) mode or 9 for AlwaysLocate (backup) mode

Example: **\$PMTK225,9*22**

The acknowledgement response for the command is:

\$PMTK001,225,3*35

AlwaysLocate™ mode is exited by sending the NMEA command:

\$PMTK225,0*2B

just after the module wakes up from its previous sleep cycle.



5.1.3. Sensitivity - SL869-V2 and SL869L-V2

Constellation(s)	State	Minimum Signal Level (dBm)	
		SL869-V2	SL869L-V2
GPS	Acquisition	-145	-148
	Navigation	-158	-160
	Tracking	-161	-162
GLONASS	Acquisition	-144	-148
	Navigation	-157	-160
	Tracking	-159	-161
BeiDou	Acquisition	-143	-146
	Navigation	-156	-159
	Tracking	-158	-160

Note: The above performance values were measured under lab conditions using a GNSS simulator generating a static scenario.

Table 5-3 SL869-V2 and SL869L-V2 Receiver Sensitivity



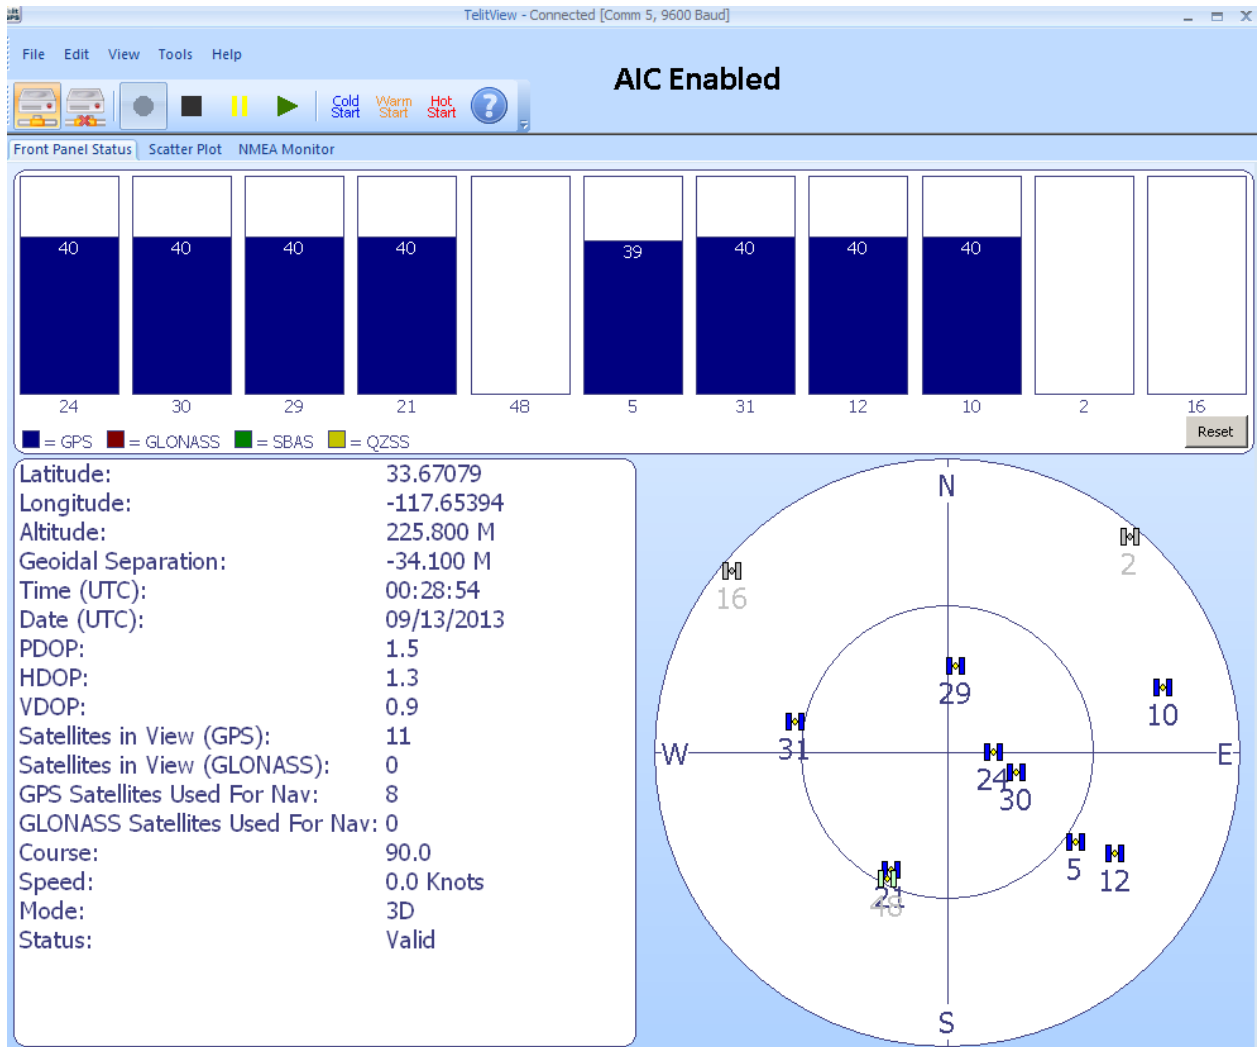


Figure 5-2 Jamming with AIC Enabled



6. Software Interface

Serial I/O port 1 (RX and TX pins) supports full duplex communication between the receiver and the user.

The default serial configuration is: NMEA, 9600 bps, 8 data bits, no parity, 1 stop bit.



More information regarding the software interface can be found in the **Telit MT Software User Guide**.

Customers that have executed a Non-Disclosure Agreement (NDA) with Telit Wireless may obtain the **SL869-V2 and SL871 Families Authorized Software User Guide**, which contains additional proprietary information.

6.1. NMEA Output Messages

NMEA-0183 v4.10 is the default protocol.



Some sentences may exceed the NMEA length limitation of 80 characters.

Default: GPS and QZSS constellations enabled. GLONASS is also enabled for SL869-V2 and SL869L-V2.

Default fix rate: 1 Hz. Maximum rate is 10 Hz.

Note: Multiple GSA and GSV messages may be output on each cycle.

6.1.1. Standard Messages

Message ID	Description
RMC	GNSS Recommended minimum navigation data
GGA	GNSS position fix data
VTG	Course Over Ground & Ground Speed
GSA	GNSS Dilution of Precision (DOP) and active satellites
GSV	GNSS satellites in view.

Table 6-1 Default NMEA output messages



The following messages can be enabled by command:

Message ID	Description
GLL	Geographic Position – Latitude & Longitude
ZDA	Time & Date

Table 6-2 Available Messages

The following table shows the Talker IDs used:

Talker ID	Constellation
BD	BeiDou
GA	Galileo
GL	GLONASS
GP	GPS
QZ	QZSS

Table 6-3 NMEA Talker IDs

6.1.2. Proprietary Output Messages

The SL869-V2 receivers support several proprietary NMEA output messages which report additional receiver data and status information.

Message ID	Description
\$PMTK010	System messages (e.g. to report startup, etc.)



6.2.1. NMEA Commands List

Command ID	Description
\$PMTK000	Test. This command will be echoed back to the sender (for testing the communications link).
\$PMTK101	Perform a HOT start
\$PMTK102	Perform a WARM start
\$PMTK103	Perform a COLD start
\$PMTK104	Perform a system reset (erasing any stored almanac data) and then a COLD start
\$PMTK120	Erase aiding data stored in flash memory
\$PMTK127	Erase EPO data stored in flash memory
\$PMTK161,0	Standby - Stop mode
\$PMTK161,1	Standby - Sleep mode
\$PMTK251,Baudrate	Set NMEA Baud rate
\$PMTK313,0	Disable SBAS feature
\$PMTK313,1	Enable SBAS feature
\$PMTK353,1,0,0,0,0	Enable GPS only mode
\$PMTK353,0,1,0,0,0	Enable GLO only mode
\$PMTK353,0,0,0,0,1	Enable BDS only mode
\$PMTK353,1,1,0,0,0	Enable GPS and GLO mode
\$PMTK353,1,0,0,0,1	Enable GPS and BDS mode

NOTE: Multi-constellation commands are not supported by the SL869-V2S modules

Table 6-4 NMEA Input commands



7. Flash Upgradability

(SL869-V2 and SL869L-V2 only)

Note: The SL869-V2S and SL869L-V2S are ROM-based and therefore are not upgradable. Please refer to the SL869-V2 EVK User Guide for more detailed information.

The firmware stored in the internal Flash memory of the SL869-V2 may be upgraded via the serial port TX/RX pins. In order to update the FW, the following steps should be performed to re-program the module.

1. Remove all power to the module.
2. Connect serial port USB cable to a PC.
3. Apply main power.
4. Clearing the entire flash memory is strongly recommended prior to programming.
5. Run the software utility to re-flash the module.
6. Upon successful completion of re-flashing, remove main power to the module for a minimum of 10 seconds.
7. Apply main power to the module.
8. Verify the module has returned to the normal operating state.



8. Electrical Interface

8.1. Pinout Diagrams and Tables

8.1.1. SL869-V2 Pin-out diagram

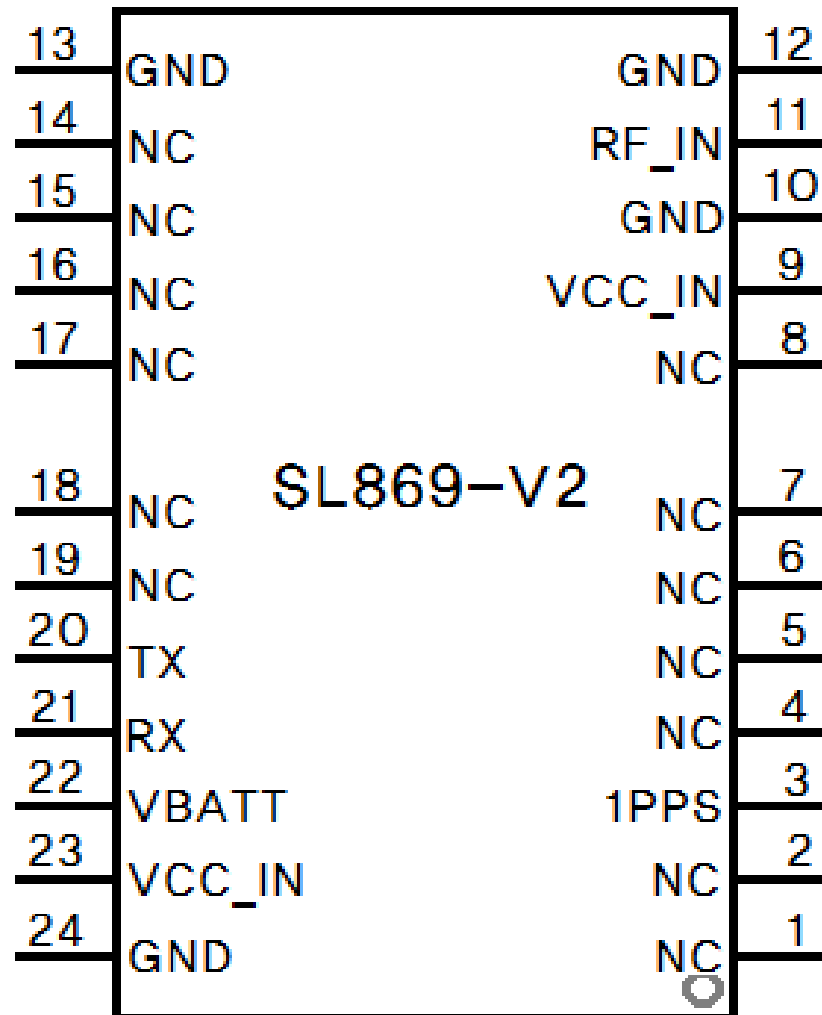


Figure 8-1 SL869-V2 Pin-out diagram



8.1.2. SL869-V2 Pin-out table

Pad Number	Pad Name	Type	Description
1	NC	NC	No Connection
2	NC	NC	No Connection
3	1PPS	O	Time mark Pulse
4	NC	NC	No Connection
5	NC	NC	No Connection
6	NC	NC	No Connection
7	NC	NC	No Connection
8	NC	NC	No Connection
9	VCC_RF	PWR	Antenna (Bias-T) Supply Voltage (connected by internal trace to pin 23)
10	GND	GND	Ground
11	RF_IN	I	GNSS RF Input, 50 Ohm (LNA input)
12	GND	GND	Ground
13	GND	GND	Ground
14	NC	NC	No Connection
15	NC	NC	No Connection
16	NC	NC	No Connection
17	NC	NC	No Connection
18	NC	NC	No Connection
19	NC	NC	No Connection
20	TX	O	TX
21	RX	I	RX
22	VBATT	PWR	Backup Voltage Supply
23	VCC_IN	PWR	Supply Voltage (internally connected to pin 9)
24	GND	GND	Ground

Note: All GROUND pins must be connected to ground

Table 8-1 SL869-V2 Pinout Table



8.1.3. SL869L-V2 Pin-out diagram

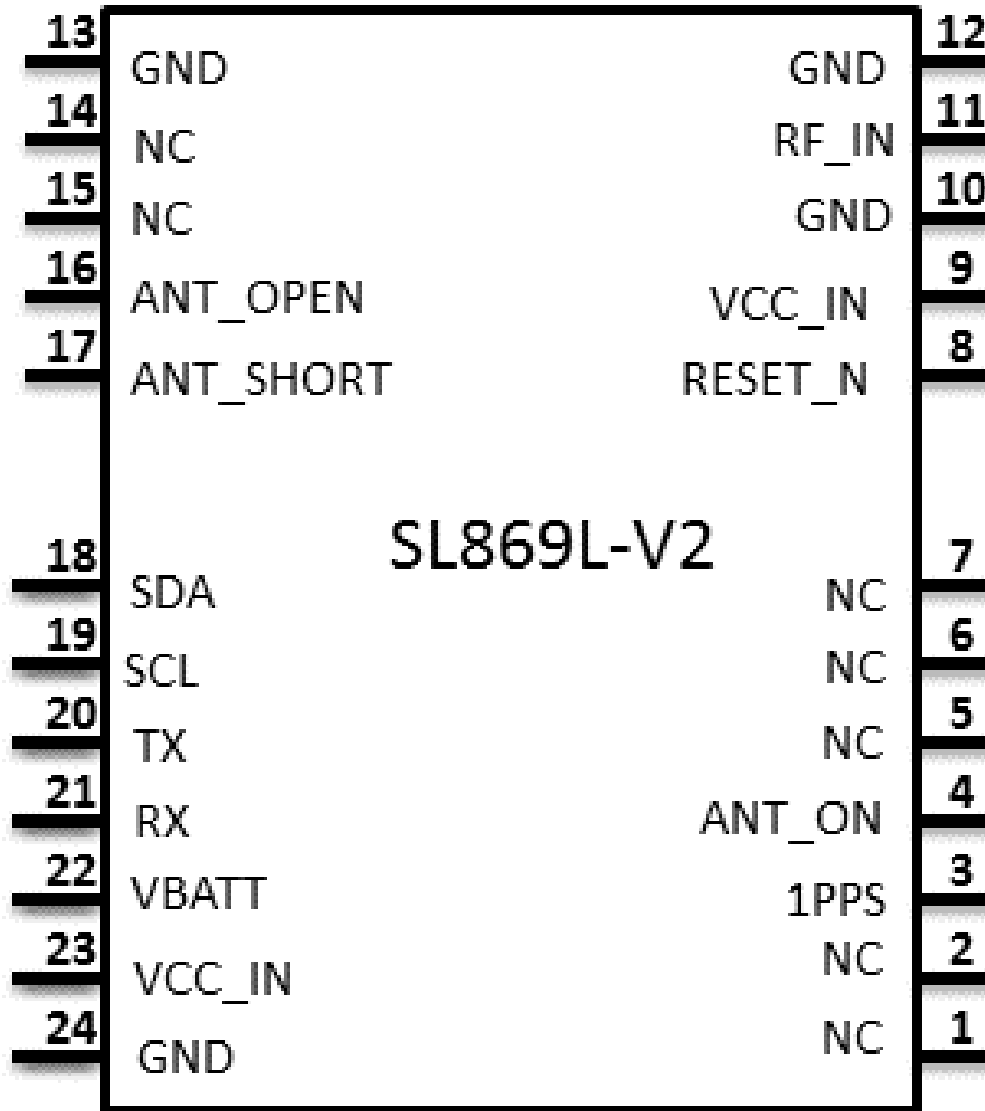


Figure 8-2 SL869L-V2 Pin-out diagram



8.1.4. SL869L-V2 Pin-out table

Pad Number	Pad Name	Type	Description
1	NC	NC	No Connection
2	NC	NC	No Connection
3	1PPS	O	Time mark Pulse
4	ANT_ON	O	Antenna-On
5	NC	NC	No Connection
6	NC	NC	No Connection
7	NC	NC	No Connection
8	RESET_N	I	RESET-N (Active Low with pullup) May be left unconnected
9	VCC_RF	PWR	Antenna (Bias-T) Supply Voltage (connected by internal trace to pin 23)
10	GND	GND	Ground
11	RF_IN	I	GNSS RF Input, 50 Ohm (SAW input). Note 1.
12	GND	GND	Ground
13	GND	GND	Ground
14	NC	NC	No Connection
15	NC	NC	No Connection
16	ANT_OPEN	I	Antenna-Open (High true)
17	ANT_SHORT	I	Antenna-Shorted (Low true)
18	SDA	I/O	I ² C Data
19	SCL	O	I ² C Clock
20	TX	O	UART Transmit
21	RX	I	UART Receive
22	VBATT	PWR	Backup Voltage Supply
23	VCC_IN	PWR	Supply Voltage (internally connected to pin 9)
24	GND	GND	Ground

Note: All GROUND pins must be connected to ground

1. DC Blocking capacitor has been added to RF_IN in SL869L-V2.

Table 8-2 SL869L-V2 Pinout Table



8.1.5. SL869-V2S Pin-out diagram

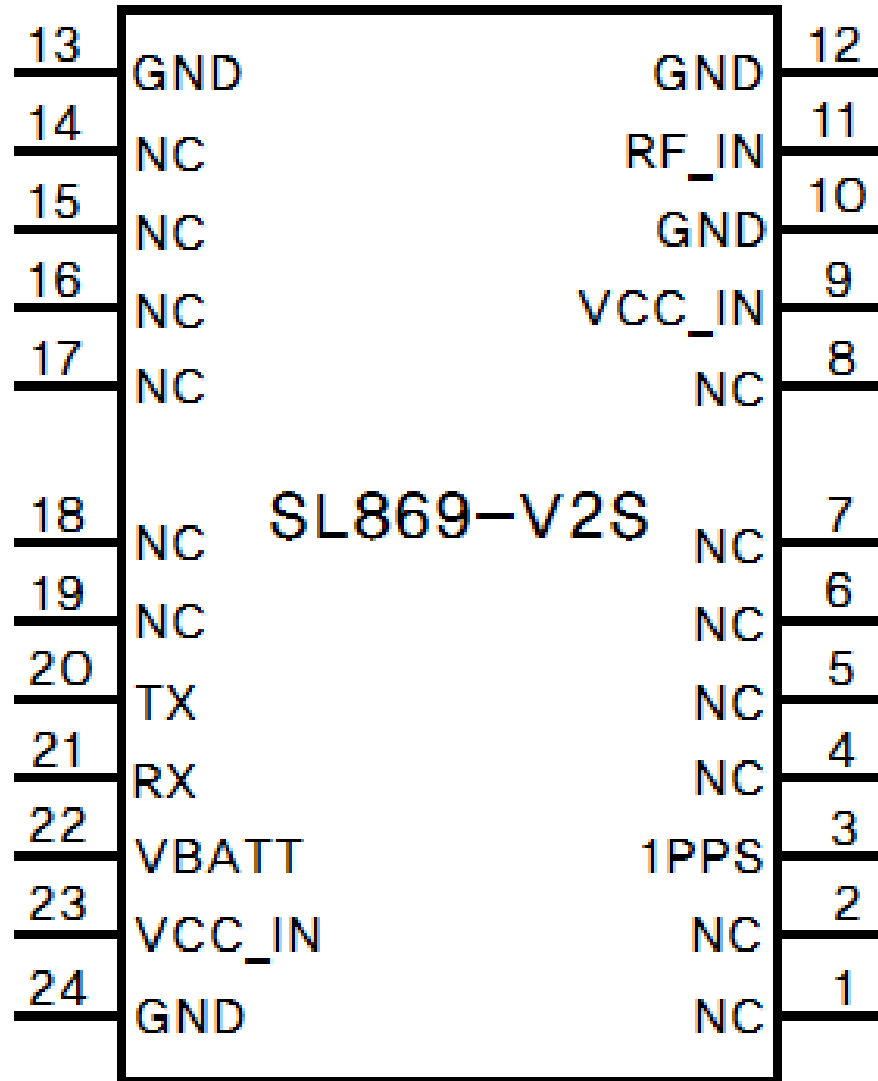


Figure 8-3 SL869-V2S Pin-out diagram



8.1.6. SL869-V2S Pin-out table

Pad Number	Pad Name	Type	Description
1	NC	NC	No Connection
2	NC	NC	No Connection
3	1PPS	O	Time mark Pulse
4	NC	NC	No Connection
5	NC	NC	No Connection
6	NC	NC	No Connection
7	NC	NC	No Connection
8	NC	NC	No Connection
9	VCC_RF	PWR	Antenna (Bias-T) Supply Voltage (connected by internal trace to pin 23)
10	GND	GND	Ground
11	RF_IN	I	GNSS RF Input, 50 Ohm (LNA input)
12	GND	GND	Ground
13	GND	GND	Ground
14	NC	NC	No Connection
15	NC	NC	No Connection
16	NC	NC	No Connection
17	NC	NC	No Connection
18	NC	NC	No Connection
19	NC	NC	No Connection
20	TX	O	TX
21	RX	I	RX
22	VBATT	PWR	Backup Voltage Supply
23	VCC_IN	PWR	Supply Voltage (internally connected to pin 9)
24	GND	GND	Ground

Note: All GROUND pins must be connected to ground

Table 8-3 SL869-V2-S Pin-out table



8.1.7. SL869L-V2S Pin-out diagram

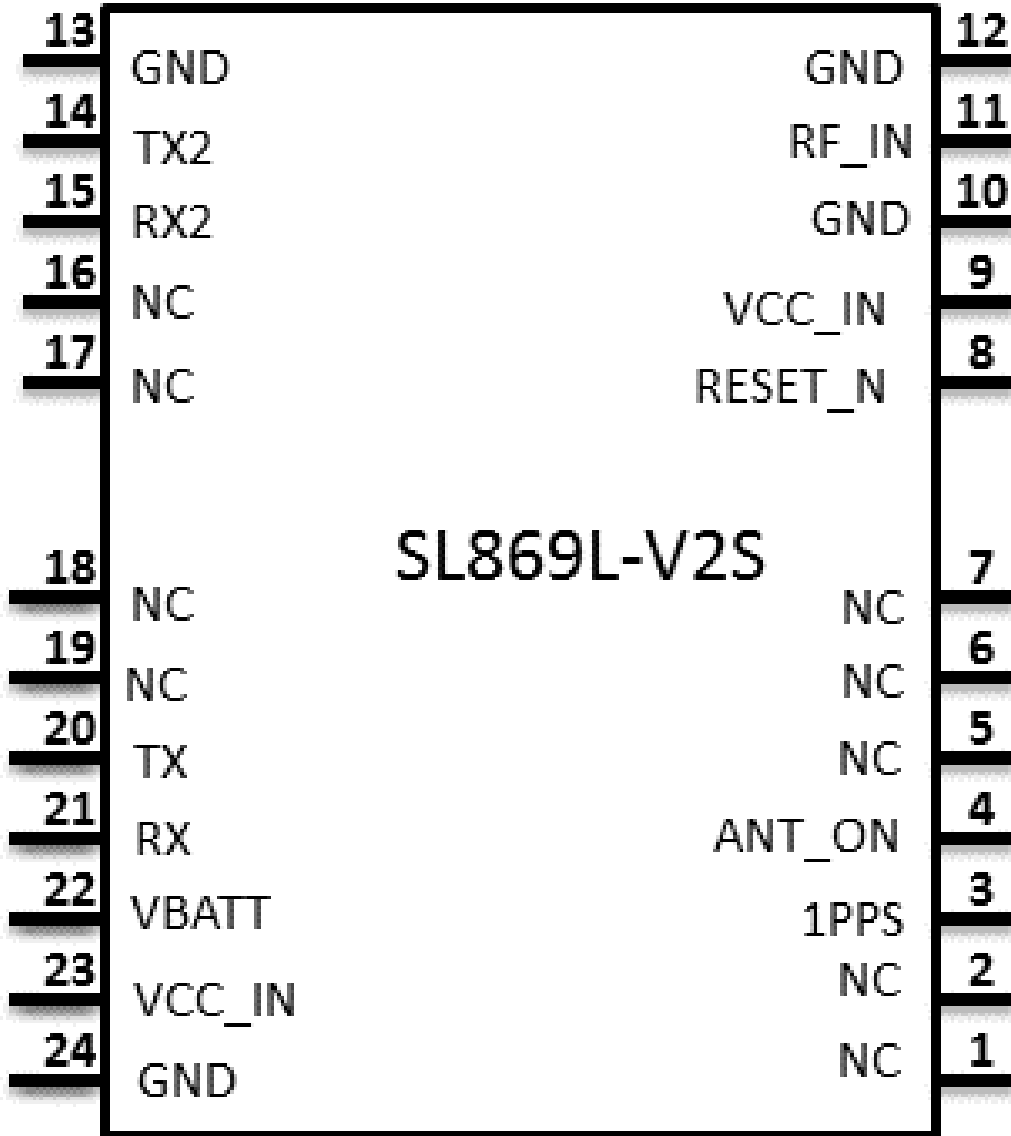


Figure 8-4 SL869L-V2S Pin-out diagram



8.1.8. SL869L-V2S Pin-out table

Pad Number	Pad Name	Type	Description
1	NC	NC	No Connection
2	NC	NC	No Connection
3	1PPS	O	Time mark Pulse
4	ANT_ON	O	Antenna On
5	NC	NC	No Connection
6	NC	NC	No Connection
7	NC	NC	No Connection
8	RESET_N	I	RESET-N (Active Low with pullup) May be left unconnected
9	VCC_RF	PWR	Antenna (Bias-T) Supply Voltage (connected by internal trace to pin 23)
10	GND	GND	Ground
11	RF_IN	I	GNSS RF Input, 50 Ohm (SAW input). Note 1.
12	GND	GND	Ground
13	GND	GND	Ground
14	TX2	O	UART 2 Transmit
15	RX2	I	UART 2 Receive
16	NC	NC	No Connection
17	NC	NC	No Connection
18	NC	NC	No Connection
19	NC	NC	No Connection
20	TX	O	UART Transmit
21	RX	I	UART Receive
22	VBATT	PWR	Backup Voltage Supply
23	VCC_IN	PWR	Supply Voltage (internally connected to pin 9)
24	GND	GND	Ground

Note: All GROUND pins must be connected to ground

Table 8-4 SL869L-V2S Pin-out table

1. DC Blocking capacitor has been added to RF_IN in SL869L-V2S.



8.2. Power Supply

The SL869-V2 modules have two power supply pins VCC and VBATT.

8.2.1. VCC

This is the main power input. The supply voltage must be in the range specified in **Table 8-5 DC Supply Voltage** below. VBATT must be powered up (externally) during any time that power is applied to VCC. This may be accomplished by tying VBATT to VCC.

When power is first applied the module will start up in full power continuous operation mode. During operation, the current drawn by the module can vary greatly, especially if enabling low-power operation modes. The supply must be able to handle the current fluctuation including any inrush surge current.

GPS/GNSS receiver modules require a clean and stable power supply. In designing such a supply, any resistance in the VCC line can negatively influence performance. Consider the following points: All supplies should be within the rated requirements. At the module input, use low ESR capacitors that can deliver the required current for switching from backup mode to normal operation. Keep the rail short and away from any noisy data lines or switching supplies, etc. Wide power lines and power planes are preferred.

8.2.2. VBATT

The battery backup power input range is specified in the table below.

VBATT must be powered up (externally) during any time that power is applied to VCC.

This may be accomplished by tying VBATT to VCC.

In case of a power failure on VCC, VBATT supplies power to the following:

- real-time clock (RTC)
- battery backed RAM (BBRAM)
- EASY data
- Default configuration options (not commanded options)

This allows the module to retain time and ephemeris information, thus enabling hot and warm starts which will shorten TTFB.

For the SL869-V2 and SL869L-V2, if VBATT is removed EPO data is also retained in flash memory.

8.2.3. VCC_RF

VCC_RF is directly connected to VCC by an internal trace and may be used to power an external LNA or bias-T. Maximum current available is 50 mA. It may be left unconnected.



8.2.4. DC Power Requirements

Main Supply Voltage & Backup Voltage					
Supply	Name	Min	Typ	Max	Units
Main Voltage	VCC	2.8	3.3	4.3	V
Backup Voltage	VBATT	2.8	3.3	4.3	V

Table 8-5 DC Supply Voltage

8.2.5. DC Power Consumption: SL869-V2

State & Constellation	Typ	Max	Units
Acquisition			
GPS Only	84	123	mW
GPS and Glonass	103	146	mW
GPS and BeiDou	94	143	mW
Navigation/Tracking			
GPS Only	74	120	mW
GPS and Glonass	81	139	mW
GPS and BeiDou	92	152	mW
Low Power Mode			
GPS Only	19		mW
GPS and (Glonass or BeiDou)	25		mW
Battery Backup	22		uW
Operating temperature: 25°C Supply voltages: 3.3 VDC nominal Low Power mode: 500 ms duty cycle SBAS: enabled 1PPS sync: enabled			

Table 8-6 SL869-V2 Power Consumption



8.2.6. DC Power Consumption: SL869L-V2

State & Constellation	Typ	Max	Units
Acquisition			
GPS Only	79	102	mW
GPS + Glonass	86	122	mW
GPS + BeiDou	86	122	mW
Navigation/Tracking			
GPS Only	74	102	mW
GPS + Glonass	80	116	mW
GPS + BeiDou	86	116	mW
Low Power - Periodic			
GPS Only	24		mW
GPS + Glonass	30		mW
GPS + BeiDou	30		mW
Low Power – AlwaysLocate Standby			
GPS Only	16		mW
GPS + Glonass	23		mW
GPS + BeiDou	23		mW
Low Power - Backup			
GPS Only	34		uW
GPS + Glonass	34		uW
GPS + BeiDou	34		uW
Operating temperature: 25°C Supply voltages: 3.3 VDC nominal Low Power mode: 500 ms duty cycle SBAS: disabled 1PPS sync: disabled			

Table 8-7 SL869L-V2 Power Consumption



8.2.7. DC Power Consumption: SL869-V2S

State & Constellation	Typ	Max	Units
Acquisition			
GPS Only	74	110	mW
Navigation/Tracking			
GPS Only	64	108	mW
Battery Backup	24		uW
Operating temperature: 25°C Supply voltages: 3.3 VDC nominal Low Power mode: 500 ms duty cycle. SBAS: enabled 1PPS sync: enabled			

Table 8-8 SL869-V2S Power Consumption

8.2.8. DC Power Consumption: SL869L-V2S

State & Constellation	Typ	Max	Units
Acquisition			
GPS Only	56	91	mW
Navigation/Tracking			
GPS Only	53	84	mW
Battery Backup	23		uW
Operating temperature: 25°C Supply voltages: 3.3 VDC nominal Low Power mode: 500 ms duty cycle SBAS: disabled 1PPS sync: disabled			

Table 8-9 SL869L-V2S Power Consumption



8.3. Antenna RF Interface

8.3.1. RF-IN

The RF input (RF-IN) pin accepts GNSS signals in the range of 1561 MHz to 1606 MHz (1573.42 to 1577.42 MHz for the SL869-V2S) at a level between -125 dBm and -165 dBm into 50 Ohm impedance.



The RF input pin is ESD sensitive.

(SL869-V2 and SL869-V2S)



Max \pm 3V DC can be applied to the RF input.

(SL869L-V2 and SL869L-V2S)

The SL869L-V2 and SL869L-V2S modules include a DC blocking capacitor.

(SL869-V2 and SL869-V2S)

The receiver contains a preselect SAW filter. This allows it to work well with a passive GNSS antenna. For improved performance, or if the antenna cannot be located near the receiver, an active antenna (that is, an antenna with a built-in low noise amplifier) can be used.

(SL869L-V2 and SL869L-V2S)

The receiver contains an LNA and a postselect SAW filter. This provides improved performance in poor signal conditions or with passive antennas

The firmware sets the internal LNA gain to a default value. Optimum performance is realized when the firmware build matches the type of antenna used (active or passive).

Antenna Gain:

- Passive antenna: isotropic gain of greater than -6 dBi.
- Active antenna: optimum gain is 15 dB to 20 dB (including cable losses).
- A noise figure of less than 1.0 dB will offer the best performance.



The maximum total external gain is 36 dB (including all external gain - i.e. antenna gain, external LNA gain, and any passive losses due to cables, connectors, filters, matching networks, etc.).



8.3.2. Frequency Plan

Signal	Frequency (MHz)
TCXO Frequency	26.000
LO Frequency	1588.6

Table 8-10 Frequency Plan

8.3.3. Burnout Protection

The receiver accepts without risk of damage a signal of +10 dBm from 0 to 2 GHz carrier frequency, except in band 1560 to 1610 MHz where the maximum level is –10 dBm.

8.3.4. Jamming Rejection – Active Interference Cancellation

Jamming Rejection can be used for solving narrow band (CW) EMI problems in the customer’s system. It is effective against narrow band clock harmonics. Jamming Rejection is not effective against wide band noise, e.g. from a host CPU memory bus or switching power supply because these sources typically cannot be distinguished from thermal noise. A wide band jamming signal effectively increases the noise floor and reduces GNSS signal levels.

Please refer to § 4.8 Jamming Rejection – Active Interference Cancellation (AIC)

8.4. Digital Interface Signals

8.4.1. Antenna Related

8.4.1.1. VCC-RF (Active Antenna Supply Voltage)

If an active antenna or external LNA is used, an external bias-T is required to provide voltage to it.

(SL869-V2 and SL869-V2S only)

A DC blocking capacitor is also required to prevent out-of-range DC voltage from being applied to RF-IN except for SL869L-V2 and SL869L-V2S modules (which include a DC blocking capacitor).



8.4.1.2. **ANT-ON**

(SL869L-V2 and SL869L-V2S only)



Antenna on (ANT-ON) is an output logic level to control the power supplied to an external LNA or active antenna (for example, using an external FET switch connected from VCC-RF to a bias-T). When logic high, the external antenna or LNA should be active; when logic low the external antenna should be powered down. Since this pin is internally connected to the TCXO supply, it should be free of noise and loading should be minimal.

This signal is not available on the SL869-V2 or SL869-V2S.

The logic levels are shown in **Table 8-13 Output Logic Levels: ANT_ON**.

8.4.1.3. **ANT-OC**

(SL869-V2 and SL869L-V2 only)

This signal is a high true input. When the input is at logic 1, the receiver will output a special NMEA message indicating the antenna line is open. The circuitry to drive this input is external to the SL869-V2 module. This signal is only available on the SL869-V2 and SL869L-V2.

The logic levels are shown in **Table 8-11 Input Logic Levels: RX and Reset-N, & Ant Sense**.

8.4.1.4. **ANT-SC-N**

(SL869-V2 and SL869L-V2 only)

This signal is a low true input. When the input is at logic 0, the receiver will output a special NMEA message indicating the antenna line is shorted. The circuitry to drive this input is external to the SL869-V2 module. This signal is only available on the SL869-V2 and SL869L-V2.

The logic levels are shown in **Table 8-11 Input Logic Levels: RX and Reset-N, & Ant Sense**.



8.4.2. Control Signals

8.4.2.1. RESET-N

(SL869L-V2 and SL869L-V2S only)

The Reset-N input is a low true input to reset the receiver to the default starting state. This signal is not required for the module to operate properly, so this pin may be left unconnected. However, if used, the signal can only be driven low, never high since it has an internal pullup, for example, using an open-collector circuit.

The logic levels are shown in **Table 8-11 Input Logic Levels: RX and Reset-N, & Ant Sense.**

8.4.3. Output Signals

8.4.3.1. 1PPS

1PPS is a one pulse per second signal with approximately 100 ms duration which is active when the receiver is in 3D navigation. The 1PPS pulse may vary 30 ns (1σ).

The relationship between the 1PPS signal and UTC is unspecified.

The logic levels are shown in

Table 8-12 Output Logic Levels: TX and 1PPS



8.4.5. Signal Levels

Several distinct logic levels are utilized by the digital signal interfaces of the module:

8.4.5.1. Logic Levels – Inputs

RX, RX2, Reset-N, ANT-SC-N, and ANT_OC					
Signal	Symbol	Min	Typ	Max	Units
Input Voltage (L)	V_{il}	0		0.5	V
Input Voltage (H)	V_{ih}	1.9		3.4	V

Note: These inputs have an internal pullup of 40 kΩ to 190 kΩ.
Do not drive the Reset-N line high.

Table 8-11 Input Logic Levels: RX and Reset-N, & Ant Sense

8.4.5.2. Logic Levels – Outputs

TX, TX2, and 1PPS					
Signal	Symbol	Min	Typ	Max	Units
Output Voltage (L)	V_{ol}			0.4	V
Output Voltage (H)	V_{oh}	2.14		VCC	V
Normal Current (L)	I_{ol}		-2		mA
Output Current (H)	I_{oh}		-2		mA

Table 8-12 Output Logic Levels: TX and 1PPS

ANT-ON					
Signal	Symbol	Min	Typ	Max	Units
Output Voltage (L)	V_{ol}			0.4	V
Output Voltage (H)	V_{oh}	2.71		2.89	V
Normal Current (L)	I_{ol}		-2		mA
Output Current (H)	I_{oh}		-2		mA

Table 8-13 Output Logic Levels: ANT_ON



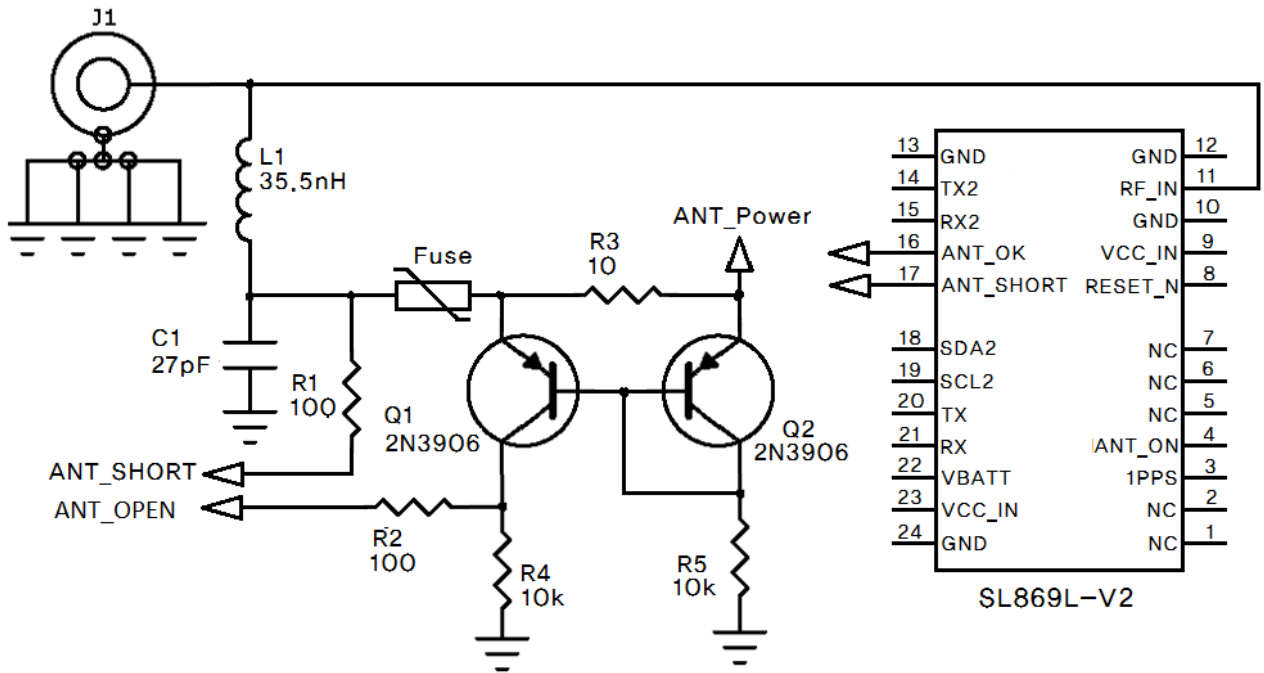


Figure 9-2 SL869L-V2 Antenna Detection Reference Design



10. RF Front End Design

The SL869-V2 and SL869-V2S modules contain a preselect SAW filter in front of the RF input. The SL869L-V2 and SL869L-V2S modules add an LNA in front of the (post-select) SAW filter which allows the modules to work well with passive GNSS antennas. For improved performance, or if the antenna cannot be located near the receiver, an active antenna (that is, an antenna with a built-in low noise amplifier) can be used.

10.1. RF Signal Requirements

The receiver can achieve Cold Start acquisition with a signal level above the specified minimum at its input. This means that it can acquire and track visible satellites, download the necessary ephemeris data and compute the location within a 5-minute period. In the GNSS signal acquisition process, demodulating the navigation message data is the most difficult task, which is why Cold Start acquisition requires a higher signal level than navigation or tracking. For the purposes of this discussion, autonomous operation is assumed, which makes the Cold Start acquisition level the dominant design constraint. If assistance data in the form of time or ephemeris aiding is available, acquisition can be accomplished at lower signal levels.

The GPS signal is defined by IS-GPS-200. This document states that the signal level received by a linearly polarized antenna having 3 dBi gain will be a minimum of -130 dBm when the antenna is in the worst-case orientation and the satellite is 5 degrees or more above the horizon.

In actual practice, the GPS satellites transmit slightly more power than specified, and the signal level typically increases if a satellite has higher elevation angles.

The GLONASS signal is defined by GLONASS ICD 2008 Version 5.1. This document states that the power level of the received RF signal from GLONASS satellite at the output of a 3dBi linearly polarized antenna is not less than -131dBm for L1 sub-band provided that the satellite is observed at an angle 5 degrees or more above the horizon.

Each GNSS satellite presents its own signal to the receiver, and best performance is obtained when the signal levels are between -130 dBm and -125 dBm. These received signal levels are determined by:

- GNSS satellite transmit power
- Free space path loss
- GNSS satellite elevation and azimuth
- Extraneous path loss (such as rain)
- Partial or total path blockage (such as foliage or buildings)
- Multipath interference (caused by signal reflection)
- GNSS antenna characteristics
- Signal path after the GNSS antenna

The satellite transmit power is specified in each constellation's reference documentation, readily available online.



The GNSS signal is relatively immune to attenuation from rainfall. However, it is heavily influenced by attenuation due to foliage (such as tree canopies, etc.) as well as outright blockage caused by buildings, terrain or other objects near the line of sight to each specific GNSS satellite. This variable attenuation is highly dependent upon satellite location. If enough satellites are blocked, say at a lower elevation, or all in one general direction, the geometry of the remaining satellites will result in a lower accuracy of position. The receiver reports this geometry effect in the form of PDOP, HDOP and VDOP.

For example, in a vehicular application, the GNSS antenna may be placed on the dashboard or rear package tray of an automobile. The metal roof of the vehicle will cause significant blockage, plus any thermal coating applied to the vehicle glass can attenuate the GNSS signal by as much as 15 dB. Again, both of these factors will affect the performance of the receiver.

Multipath interference is a phenomenon where the signal from a particular satellite is reflected and is received by the GNSS antenna in addition to or in place of the line of sight signal. The reflected signal has a path length that is longer than the line of sight path and can either attenuate the original signal, or if received in place of the original signal, can add error in determining a solution because the distance to the particular satellite is actually shorter than measured. It is this phenomenon (as well as the partial sky obscuration) that makes GNSS navigation in urban canyons (narrow roads surround by high rise buildings) so challenging. In general, the reflection of a GNSS signal causes its polarization to reverse. The implications of this are covered in the next section.

10.2. GNSS Antenna Polarization

The GPS, Glonass and BeiDou satellites all broadcast a signal that is Right Hand Circularly Polarized (RHCP).

An RHCP antenna will have 3 dB gain compared to a linearly-polarized antenna (assuming the same antenna gain specified in dBic and dBi respectively).

An RHCP antenna is better at rejecting multipath interference than a linearly polarized antenna because the reflected signal changes polarization to LHCP. This signal would be rejected by the RHCP antenna, typically by 20 dB or greater.

If the multipath signal is attenuating the line of sight signal, then the RHCP antenna would show a higher signal level than a linearly polarized antenna because the interfering signal is rejected.

However, in the case where the multipath signal is replacing the line of sight signal, such as in an urban canyon environment, then the number of satellites in view could drop below the minimum needed to determine a 3D position. This is a case where a bad signal may be better than no signal. The system designer needs to understand trade-offs in their application to determine the better choice.

10.3. Active versus Passive Antenna

If the GNSS antenna is placed near the receiver and the RF trace losses are not excessive (nominally 1 dB), then a passive antenna may be used. This would often be the lowest cost option and most of the time the simplest to use. However, if the antenna needs to be located away from the receiver, then an active antenna may be required to obtain the best system



13. Product Marking, Packaging, and Handling

13.1. Product Marking and Serialization

The SL869-V2 modules have a 2D barcode label identifying the product (SL869-V2, SL869L-V2, SL869-V2S or SL869L-V2S) and its serial number.

Contact a Telit representative for information on specific module serial numbers.

The label format is as follows:

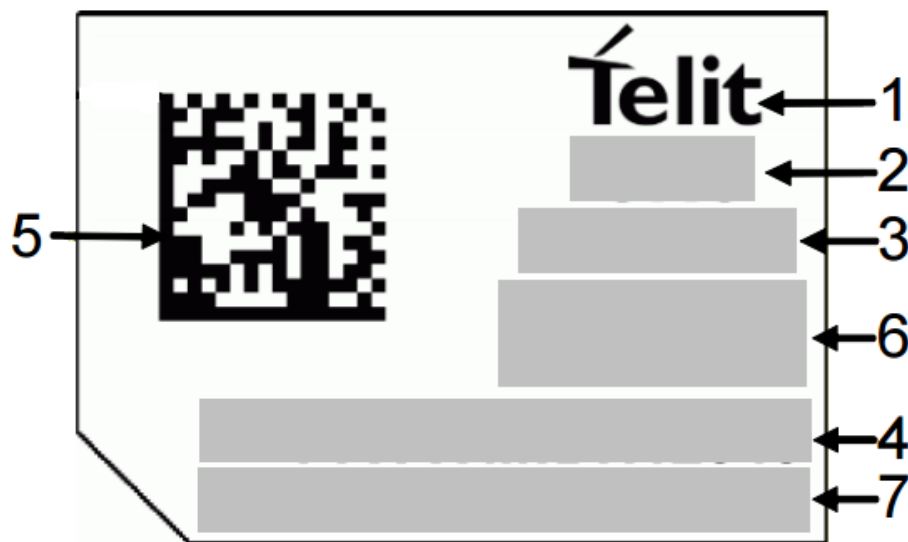


Figure 13-1 Product Label

Key	Description
1	Telit logo
2	Product Name
4	Telit Serial Number
5	Telit Serial Number barcode (type 2D datamatrix) 11 digit (base 36 – 0 to 9 followed by A to Z)
6	CE mark
Note: Other fields are unused	

Table 13-1 Product Marking Description



13.2. Product Packaging

SL869-V2 modules are shipped in Tape and Reel form on 24 mm reels with 1000 units per reel or Trays with 72 units. Each reel or tray is ‘dry’ packaged and vacuum sealed in a Moisture Barrier Bag (MBB) with two silica gel packs and a humidity indicator card which is then placed in a carton.

All packaging is ESD protective lined.

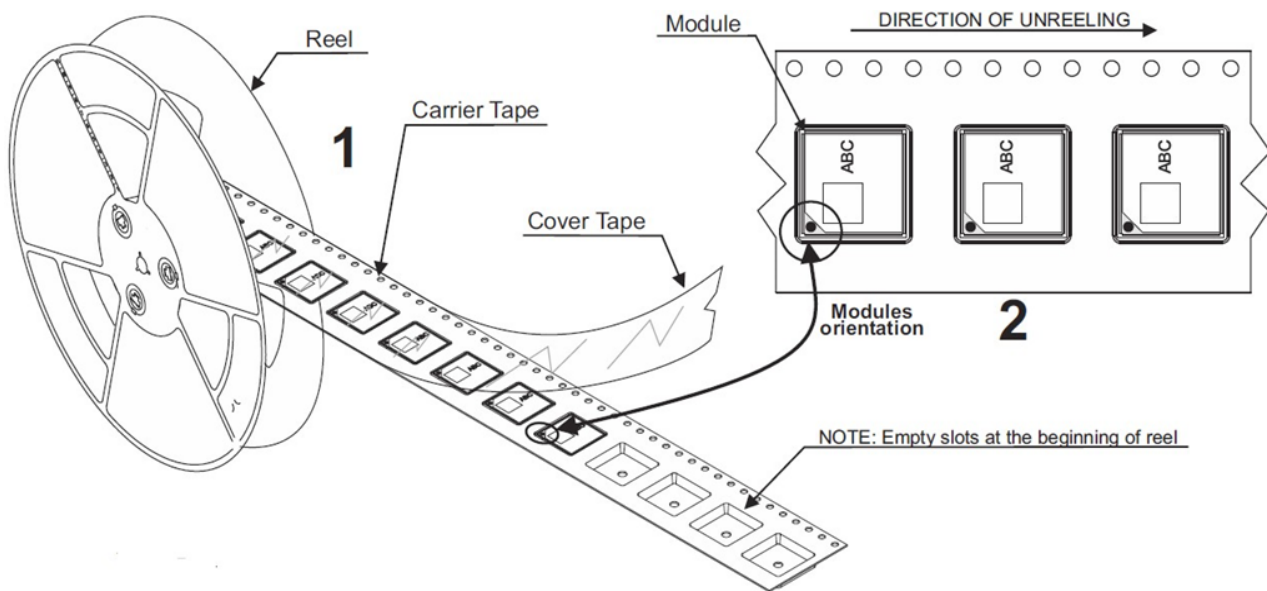


Figure 13-2 Tape and Reel Packaging



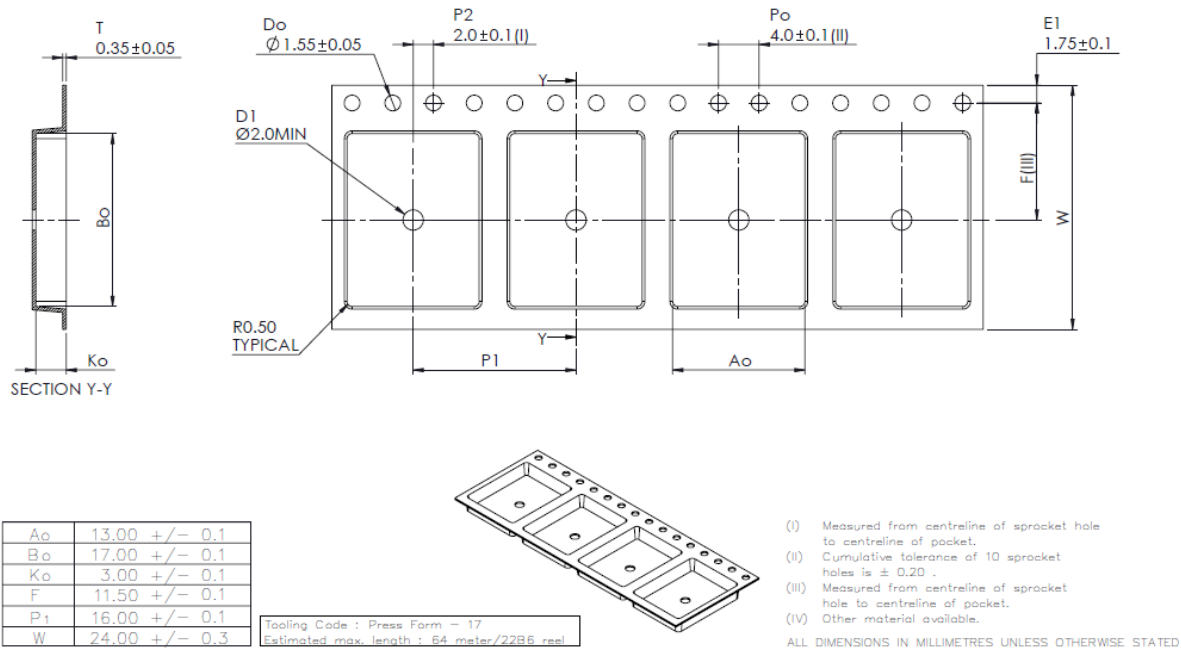


Figure 13-3 Tape and Reel - Tape Detail



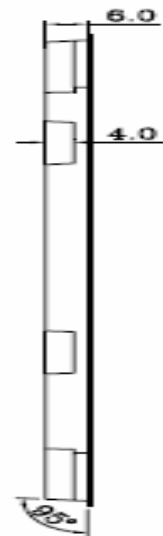


Figure 13-4 Tray Packaging

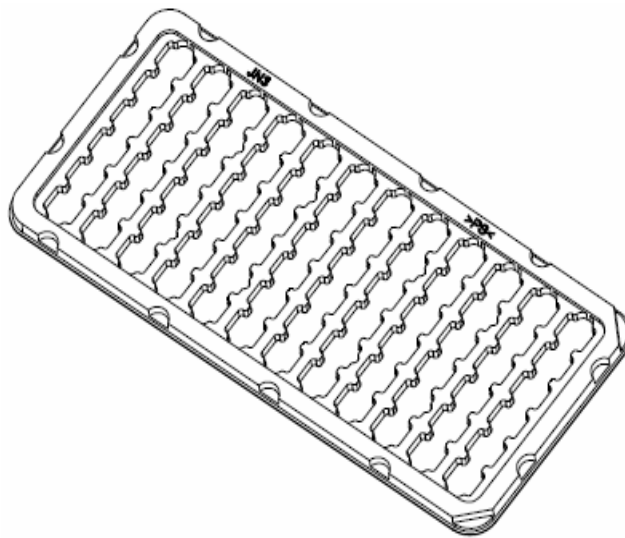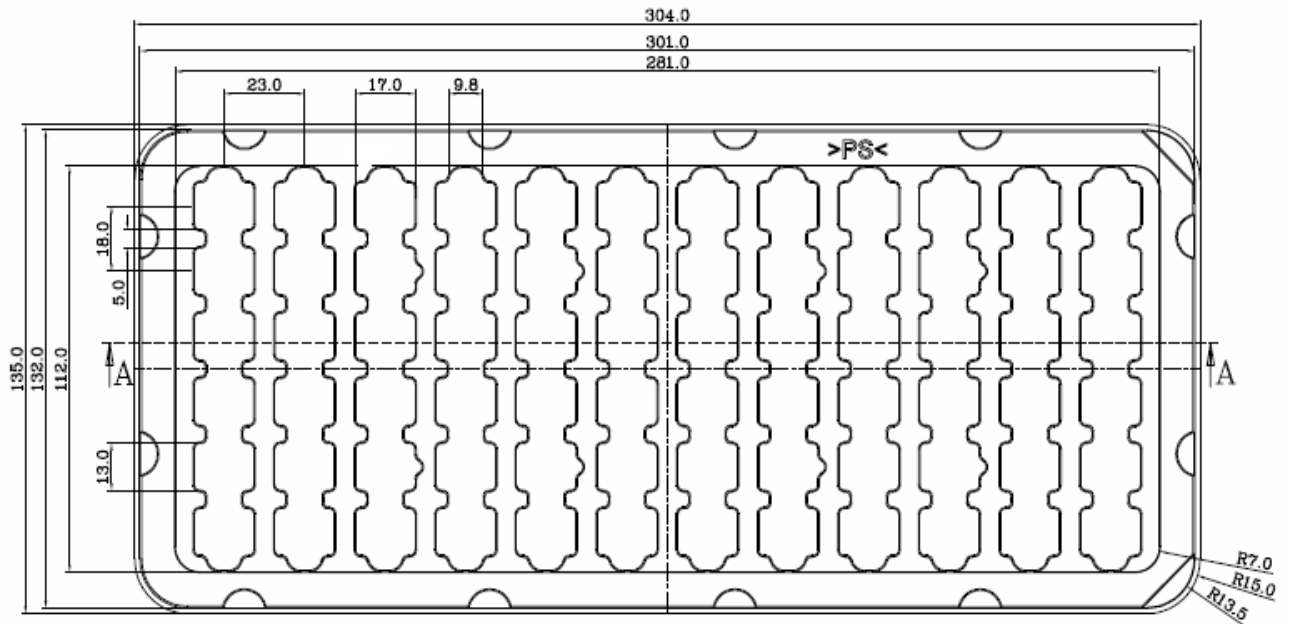

13.6. **Assembly Considerations**

Since the module contains piezo-electric components, it should be placed near the end of the assembly process to minimize mechanical shock to it. During board singulation, pay careful attention to unwanted vibrations and resonances introduced into the board assembly by the board router.

13.7. **Washing Considerations**

After assembly, the module can be washed with de-ionized water using standard PCB cleaning procedures. The shield does not provide a water seal to the internal components of the module, so it is important that the module be thoroughly dried prior to use by blowing excess water and then baking the module to drive residual moisture out. Depending upon the board cleaning equipment, the drying cycle may not be sufficient to thoroughly dry the module, so additional steps may need to be taken. Exact process details will need to be determined by the type of washing equipment as well as other components on the board to which the module is attached. The module itself can withstand standard JEDEC baking procedures

13.8. **Safety**

Improper handling and use of the receiver module can cause permanent damage. There is also the possible risk of personal injury from mechanical trauma or choking hazard.

Please see § 17 **Safety Recommendations** for additional information.

13.9. **Disposal**

We recommend that this product should not be treated as household waste.

For more detailed information about recycling this product, please contact your local waste management authority or the reseller from whom you purchased the product.



15.1. CE Declarations of Conformity



Expertise

Expert Opinion of the Notified Body on the Conformity Assessment
according to Article 10.5 of R&TTE Directive 1999/5/EC

PHOENIX TESTLAB
EU Identification Number **0700**

 Bundesnetzagentur
 Recognised by

#WZKA-05-02/51-05

Expertise No.	14-110704b
Certificate Holder	Telit Wireless Solutions Co., Ltd.
Address	8th FL. Shinyoung Securities Bld., 6, Gukjegeumyung-ro8-gil, Yeongdeungpo-gu, Seoul, 150-884, Korea
Product Description	GPS module, GNSS with GPS, GLONASS, Beidou
Brand Name / Model Name	Telit / SL869 V2

Opinion on the Essential Requirements	
Article 3.1a): Health and Safety	No remarks
Article 3.1b): Electromagnetic Compatibility	No remarks
Article 3.2: Effective Use of the Radio Spectrum	No remarks

CE-marking
Marking Example (Class 1) **CE 0700**

This certificate is issued in accordance with the Directive 1999/5/EC of the European Parliament and the Council on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity dated 9th March 1999 and is only valid in conjunction with the following annex (2 pages).
This version of the certificate replaces the expertise 14-110704a, which is hereby withdrawn.

Blomberg, 26 February 2014		 Signed by Horat Dreiner Notified Body
Place, Date of Issue		

Phone +49(0)5235-9500-24
 Fax +49(0)5235-9500-28
 notifiedbody@phoenix-testlab.de

PHOENIX TESTLAB GmbH
 Königswinkel 10
 D-32825 Blomberg, Germany
 www.phoenix-testlab.de

15.1.1. CE Declaration of Conformity: SL869-V2

Figure 15-1 CE Declaration of Conformity: SL869-V2



Galileo:

The European **GNSS** currently being built by the European Union (EU) and European Space Agency (ESA).

GDOP: Geometric Dilution of Precision

A factor used to describe the effect of satellite geometry on the accuracy of the time and position solution of a **GNSS** receiver. A lower value of GDOP indicates a smaller error in the solution. Related factors include PDOP, HDOP, VDOP and TDOP.

GLONASS: ГЛОБАЛЬНАЯ НАВИГАЦИОННАЯ СПУТНИКОВАЯ СИСТЕМА

GLOBal'naya NAVigatsionnaya Sputnikovaya Sistema

(Global Navigation Satellite System)

The Russian **GNSS**, which is operated by the Russian Aerospace Defense Forces

GNSS: Global Navigation Satellite System

Generic term for a satellite-based navigation system with global coverage. The current or planned systems are: **GPS, GLONASS, BDS, and Galileo.**

GPS: Global Positioning System

The U.S. **GNSS**, a satellite-based positioning system that provides accurate position, velocity, and time data. GPS is operated by the US Department of Defense.

Hot Start:

A hot start occurs when a receiver begins operation with known time, position, and ephemeris data, typically after being sent a restart command. See **Restart.**

LCC: Leadless Chip Carrier

A module design without pins. In place of the pins are pads of bare gold-plated copper that are soldered to the printed circuit board.

LNA: Low Noise Amplifier

An electronic amplifier used for very weak signals which is especially designed to add very little noise to the amplified signal.

Local Ephemeris prediction data:

Extended Ephemeris (i.e. predicted) data, calculated by the receiver from broadcast data received from satellites, which is stored in memory. It is usually useful for up to three days. See **AGPS.**

MSAS: MTSAT Satellite Augmentation System

The Japanese **SBAS** system.

MSD: Moisture sensitive device.

MTSAT: Multifunctional Transport Satellites

The Japanese system of geosynchronous satellites used for weather and aviation control.



Navigation Sensitivity:

The lowest signal level at which a GNSS receiver is able to reliably maintain navigation after the satellite signals have been acquired.

NMEA: National Marine Electronics Association

QZSS: Quasi-Zenith Satellite System

The Japanese **SBAS** system (part of MSAS).

Reacquisition: A receiver, while in normal operation, loses RF signal (perhaps due to the antenna cable being disconnected or a vehicle entering a tunnel), and re-establishes a valid fix after the signal is restored. Contrast with **Reset** and **Restart**.

Restart: A receiver beginning operation after being sent a restart command, generally used for testing rather than normal operation. A restart can also result from a power-up. See **Cold Start**, **Warm Start**, and **Hot Start**. Contrast with **Reset** and **Reacquisition**.

Reset: A receiver beginning operation after a (hardware) reset signal on a pin, generally used for testing rather than normal operation. Contrast with **Restart** and **Reacquisition**.

RoHS: The Restriction of Hazardous Substances

Directive on the restriction of the use of certain hazardous substances in electrical and electronic equipment, was adopted in February 2003 by the European Union.

RTC: Real Time Clock

An electronic device (chip) that maintains time continuously while powered up.

SAW: Surface Acoustic Wave filter

Electromechanical device used in radio frequency applications. SAW filters are useful at frequencies up to 3 GHz.

SBAS: Satellite Based Augmentation System

A system that uses a network of ground stations and geostationary satellites to provide differential corrections to GNSS receivers. These corrections are transmitted on the same frequency as navigation signals, so the receiver can use the same front-end design to process them. Current examples are **WAAS**, **EGNOS**, **MSAS**, and **GAGAN**.

Server-based Ephemeris prediction data:

Extended Ephemeris (i.e. predicted) data, calculated by a server and provided to the receiver over a network. It is usually useful for up to 14 days. See **AGPS**.

TCXO: Temperature-Compensated Crystal Oscillator

Tracking Sensitivity:

The lowest signal level at which a **GNSS** receiver is able to maintain tracking of a satellite signal after acquisition is complete.



17. Safety Recommendations

READ CAREFULLY

Be sure the use of this product is allowed in the country and in the environment required. The use of this product may be dangerous and has to be avoided in the following areas:

Where it can interfere with other electronic devices in environments such as hospitals, airports, aircrafts, etc.

Where there is risk of explosion such as gasoline stations, oil refineries, etc.

It is responsibility of the user to enforce the country regulation and the specific environment regulation.

Do not disassemble the product; any evidence of tampering will invalidate the warranty.

Telit recommends following the instructions of the product user guides for correct usage of the product. The product must be supplied with a stabilized voltage source and all wiring must conform to security and fire prevention regulations. The product must be handled with care, avoiding contact with the pins because electrostatic discharges may damage the product itself.

The system integrator is responsible of the functioning of the final product; therefore, care must be taken with components external to the module, as well as for any project or installation issue. Should there be any doubt, please refer to the technical documentation and the regulations in force. Non-antenna modules must be equipped with a proper antenna with specific characteristics.

The European Community provides directives for the electronic equipment introduced in the market. The relevant information is available on the European Community website:

<http://ec.europa.eu/enterprise/sectors/rtte/documents/>

The text of the directive 99/05 regarding telecommunication equipment is available, while the applicable directives (Low Voltage and EMC) are available at:

<http://ec.europa.eu/enterprise/sectors/electrical/>

The power supply used shall comply the clause 2.5 (Limited power sources) of the standard **EN 60950-1** and shall be mounted on a PCB which complies with V-0 flammability class.

Since the module must be built-in to a system, it is intended only for installation in a **RESTRICTED ACCESS LOCATION**. Therefore, the system integrator must provide an enclosure which protects against fire, electrical shock, and mechanical shock in accordance with relevant standards.

<http://ec.europa.eu/enterprise/sectors/electrical/>



